


Nº 7951

The No 7951 cremone bolt, traditionally used to secure French doors, dates back to the early part of the 20th century. A series of coves and stepped astragals comprise the strongly architectural body, guides and keepers. Cremones are designed to work with a particular application. Accordingly, rod length and keeper configuration will be determined during the specification process. Most Nanz levers and oval knobs can be used. All Nanz plated and patinated finishes are available.

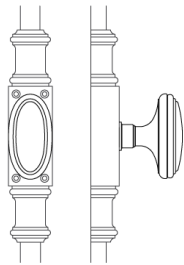

Height: 7-1/8"

Width: 1-1/2"

NEW YORK    BOSTON    CHICAGO    MIAMI    LOS ANGELES    SAN FRANCISCO    LONDON

THE NANZ COMPANY    121 VARICK STREET NEW YORK NY 10013    212 367 7000    NANZ.COM

© 1989-2017 ALL RIGHTS RESERVED