


INSTALLATION INSTRUCTIONS

Functional Deck Mounted Basin Set

AQ-SBD3

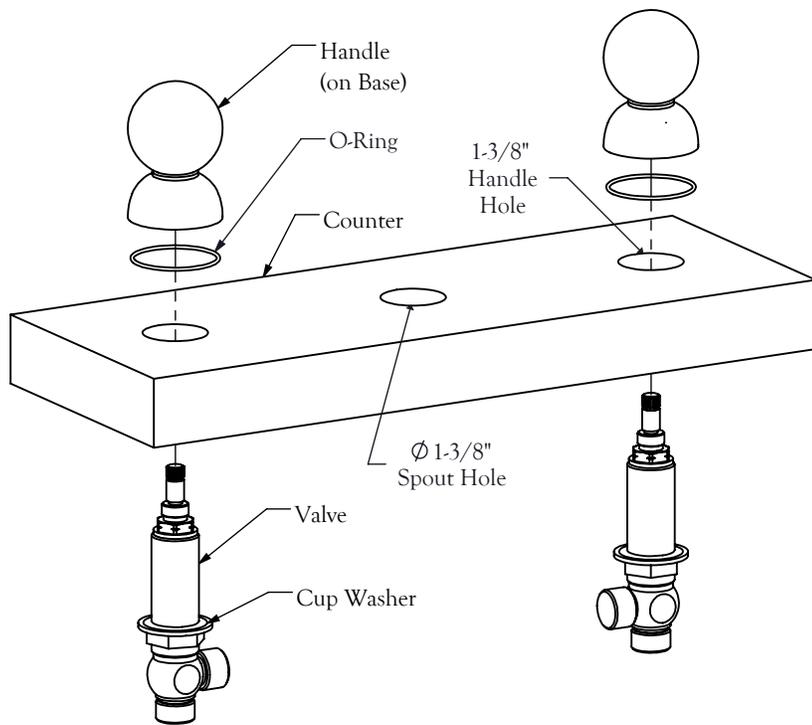



Step 1 - Handles

1. Position Handles in the center of the handle cutouts on your counter, making sure to include O-Ring.
2. Position Valve underneath and insert into underside of handle base.
3. Holding the Valve in position (see orientation of illustration), twist the Handle Base to thread the Base onto the Valve.
4. Once the Handle Base is firmly threaded onto the Valve, twist the Cup Washers to firmly fasten the assembly to the counter.

Step 2 - Spout

1. Position Spout in the spout cutout on your counter, making sure to include the O-Ring.
2. Holding the Spout in the desired orientation, fasten the Spout to the counter using the Washers and Nut.
3. Attach the Tee to the bottom of the Spout's threaded pipe, making sure that the Gasket is included. Fasten firmly to ensure watertight fit.

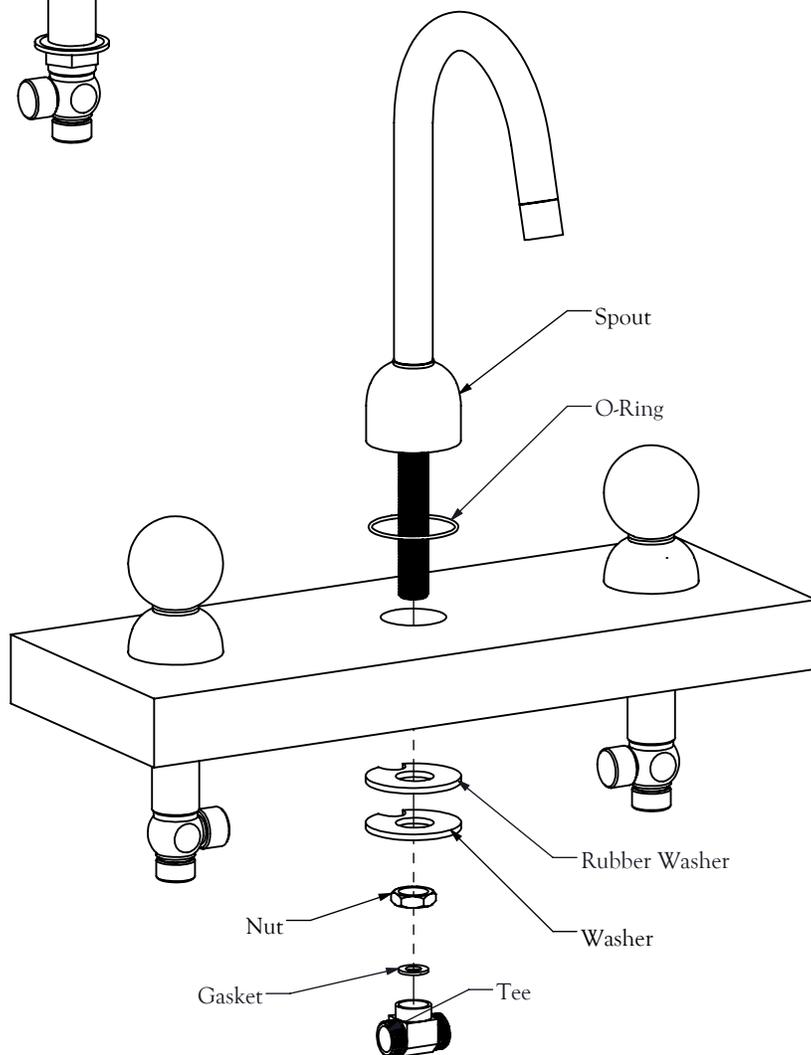

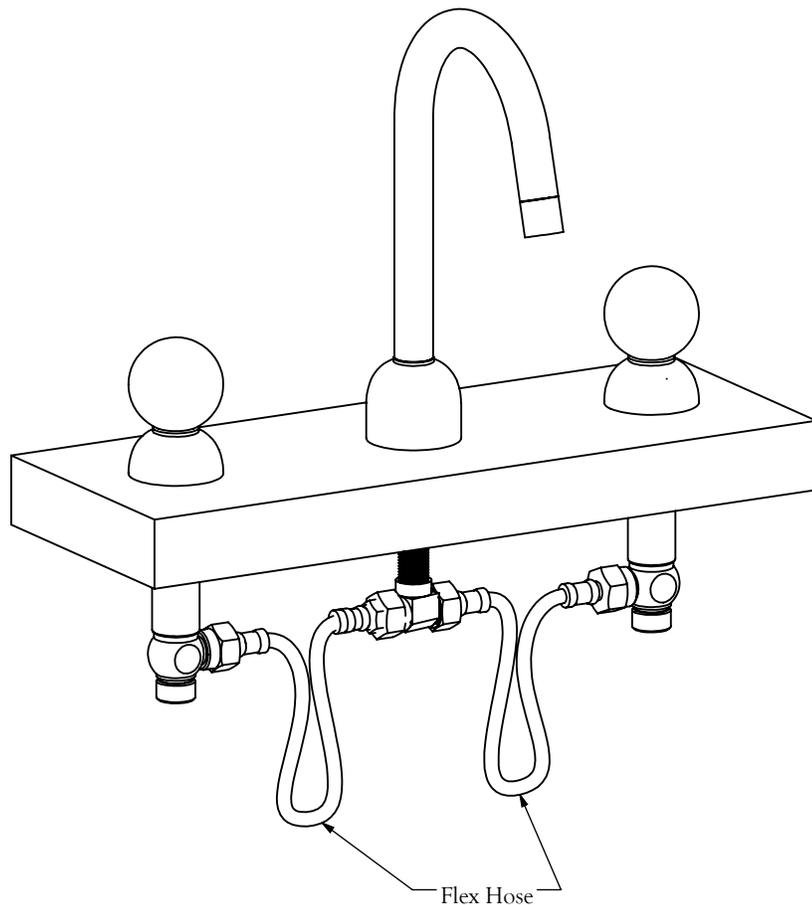

Step 3 - Flex Hoses

1. Connect the Flex Hoses to the Valve and the Tee as shown.

Step 4 - Connect to Main Supply

1. Connect your main supply to the Valve inlet (bottom of Valve).

IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS - This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING - Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION